

METRONET

Accessibility User Guide

GENERAL SETTINGS

From the Menu screen, scroll to **Settings** and press **OK**. From the Settings menu, select **General**.

General settings include:

- System Sound Effects
- On-Screen Language
- System Information
- Test Broadband
- About Program Posters

System Sound Effects

Sounds that are played when buttons are pressed on the remote. By default this is setup as Mute sound effects.

On-Screen Language

U.S. English Only

System Information

Specific information about System Information, Network Info, System Resources, Listings Information, and Network DVR.

Test Broadband

Shows if the set-top box has network connectivity.

About Program Posters

Displays program poster art.

GENERAL SETTINGS *(cont.)*

TELEVISION

On the Menu screen, scroll down to **Settings** and press **OK**. From the Settings menu, select **Television**.

Television settings include:

- Customize Channel Guide
- Set Up Favorites
- Recent Panel Settings
- Subscribed Channel Settings
- Primary Guide Style
- Screen Aspect Ratio and High Definition
- Closed Caption
- TV Receiver Name

Customize Channel Guide

Press **OK** to add or remove channels from the Guide and while changing the channel.

Set Up Favorites

Create new list of favorites or edit existing lists. Press **OK** to add or remove channels, or press **Options** to delete or rename existing lists.

Recent Channel List

View a list of recently viewed channels when pressing the **Last** button.

- Map the last button to recent channel list
- Do not map the Last button to recent channel list

View Subscribed Channels

View all channels available with MetroNet or show only subscribed channels.

GENERAL SETTINGS *(cont.)***Primary Guide Style**

First guide you will see in the guide button rotation

- Grid Guide
- Channel Lineup
- OnNow Guide

Screen Aspect Ratio & High Definition (HD)

Choose the **aspect ratio** and **resolution** for your TV and choose **Continue**.

Closed Captioning (CC)

Adjust the display on closed captioning text. Closed captioning can be turned on or off by selecting the **C** on the remote control.

TV Receiver Name

Enter a name for this TV receiver or choose from the list provided.

AUDIO SETTINGS

From the Menu screen, scroll to **Settings** and press **OK**. From the Settings menu, select **Audio**.

Audio settings include:

- Audio Language
- Secondary Audio
- Audio Description
- Digital Audio Output
- Audible Navigation

Audio Language

Select preferred audio language. Some shows broadcast with more than one language track.

Secondary Audio

Select TV programs have secondary audio for alternate languages.

Audio Description

When provided by the television program, viewers of our video service may listen to an audio-narration describing the program's key visual elements.

Digital Audio Output

This feature is currently not available.

Audible Navigation

Viewers of our video service have the option to hear the on-screen text menus and program guides read to them when using our navigation devices.

PARENTAL CONTROLS

From the Menu screen, scroll to **Settings** and press **OK**. From the Settings menu, select “Parental Controls”

Parental locking will allow a 4-digit PIN be setup to block selected programs from being viewed. You will need to enter the Parental Control PIN to view a blocked program.

Restart System

From the Menu screen, scroll to **Settings** and press **OK**. From the Settings menu, select **Restart System**.